INSTALLATION INSTRUCTIONS FOR 9806- PL

For Post Lamp Fixture

READ AND SAVE THESE INSTRUCTIONS

WARNING! SHUT POWER OFF AT FUSE OR CIRCUIT BREAKER .

HANG THE FIXTURE (Fig.1)

1. Place the fixture on the top of the POST on which is to be mounted and position as desired. Using the holes located on the POST CAP mark the holes position on the POST. Remove the fixture from the POST and drill a 1/8" diameter hole at each marked position on the POST.
2. Pull the power supply wires out from the POST and the fixture lead wires out from the POST CAP. Connect the electrical wires as shown in **Fig.2** make sure all wire nuts are secured .You may have to wrap connections with electrical tape. Attach the POWER SUPPLY GROUND WIRE to the FIXTURE GROUND WIRE. Using a wire connector rated for the size of wires being connected.
3. Place the connected wires down inside the POST and mount the POST CAP in place. Aligning the holes in the POST CAP with the POST, secure the POST CAP to the POST using 3 x 1/2" long self Tapping SHEET METAL SCREWS provided.
4. Install the PL lamp in according with the fixture's specification. (1×Max 26W included). **(DO NOT EXCEED THE MAXIMUM WATTAGE RATING!!)**
5. The ballast in each of these models can be replaced by a qualified electrician without cutting of wires and without damage to the housing, trim, decorative elements or carpentry to which the fixture is attached. See installation steps for more detail. The ballast and lamp are combined, to replace or install, twist pins into socket as shown on Fig.3
6. Place the glass with narrow side towards the lamp cover into the fixture. Place the LAMP COVER onto the top of the lamp compartment.
7. If there're any loose parts on the body because of the transportation, please fix the hex screws with the wrench provided.
8. This fixture contains an integrated photo sensor that automatically prevents operating during daylight hours.
9. This fixture is rated for a minimum start temperature of -17° Celsius.
10. This fixture is UL Listed for Wet Location applications.

Your installation is now complete. Return power to the junction box and test the fixture.

Fig.1

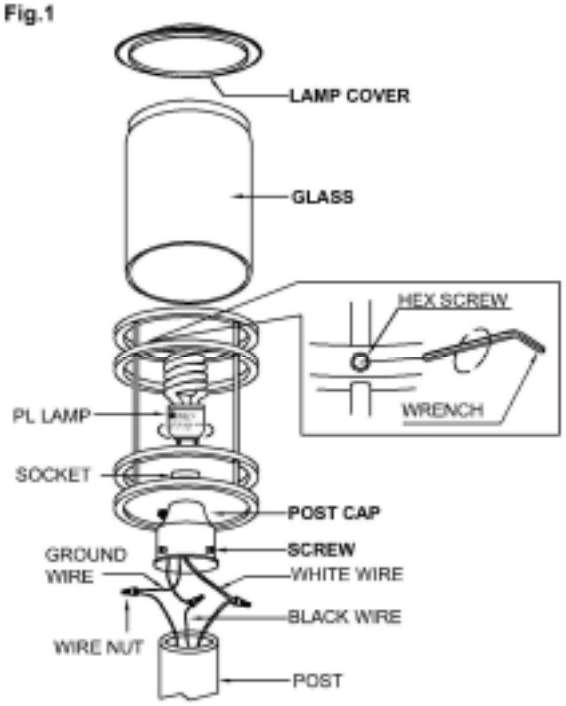

Fig .2

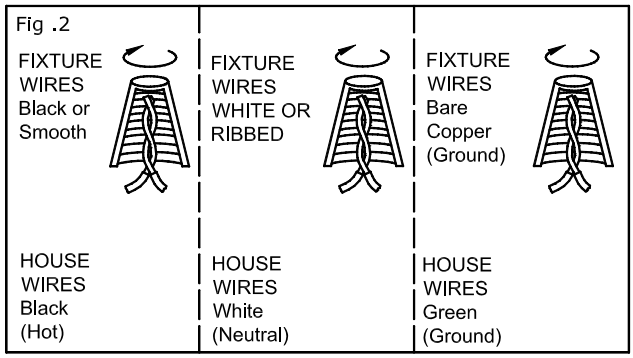
FIXTURE WIRES Black or Smooth
FIXTURE WIRES WHITE OR RIBBED
FIXTURE WIRES Bare Copper (Ground)
HOUSE WIRES Black (Hot)
HOUSE WIRES White (Neutral)
HOUSE WIRES Green (Ground)

LIMITED 2 YEAR WARRANTY

This Fixture is covered by a Limited 2 year Warranty from the Manufacturer, effective from the date of purchase. This fixture is warranted against defects in the quality of the housing, trims, diffuser, shades, and electrical components. Fixture finishes and/or lamps (bulbs) are expressly excluded from this warranty; refer to bulb manufacturer for lamp warranty. This Fixture, if supplied with an automatic shut off sensor, motion control sensor, or photocell, cannot be installed in conjunction with any other device without voiding warranty. Modifying this fixture or use of another non-provided control will also void Product Warranty and UL listing.

Fig.3

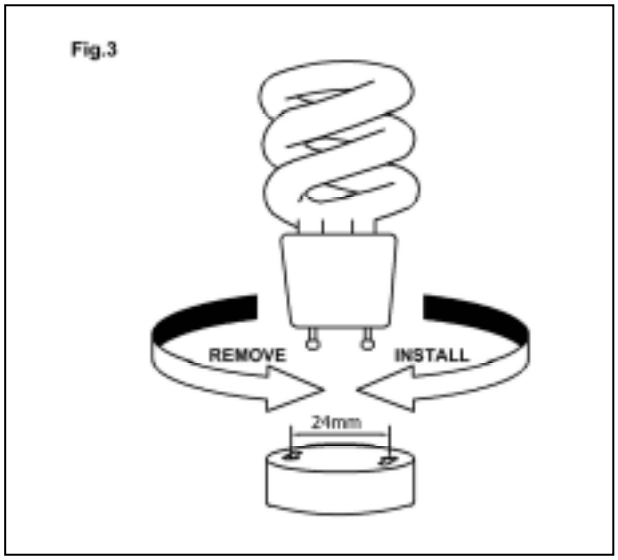

ENERGY STAR

LISTED

american lighting association